



23 Elm St., Peterborough, NH 03458
Tel: (800) 543-3458 (603) 924-9481
Fax: (603) 924-9482
Web site: www.cimindustries.com

CIM IG-2
11/06

Instruction Guide APPLICATION OF CIM TO CONCRETE

1.0 DESCRIPTION

This guide covers the installation of a black CIM Coating System over a structurally sound concrete base such as a deck, roof, tank, and tank base. The system shall consist of a minimum of 60 wet mils (see Coating Profile for appropriate coverage charts) applied by spray, squeegee, roller, or trowel. Actual coverage rates may differ from theoretical rates depending on surface profile and application method.

2.0 MATERIALS

2.1 Black CIM Premix & Activator

2.2 Optional Materials

2.2a. CIM 61BG Epoxy Primer

2.2b. CIM Bonding Agent

2.2c. CIM Scrim


2.2d. CIM 1000 Trowel Grade Premix & Activator

3.0 SAFE PRACTICES

Use equipment and procedures designed to minimize danger to personnel and materials. Special attention should be made to provide adequate ventilation and respirators for personnel applying black CIM systems in confined spaces or operating spray equipment. See C.I.M. Industries' Instruction Guides, "Applying CIM Within Confined Spaces" (IG-9) and "Spray Application of CIM" (IG-12) for more detailed information.

4.0 SURFACE PREPARATION

All areas adjacent to those being coated with black CIM which are not intended to be coated should be protected with suitable temporary splash covers such as polyethylene, carpenters paper, or masking tape. Black CIM shall be applied to clean, dry, structurally sound concrete.¹ Concrete shall only be coated while the concrete is in a temperature declining mode (usually late afternoon). CIM 61BG Epoxy Primer may be used to minimize outgassing.²

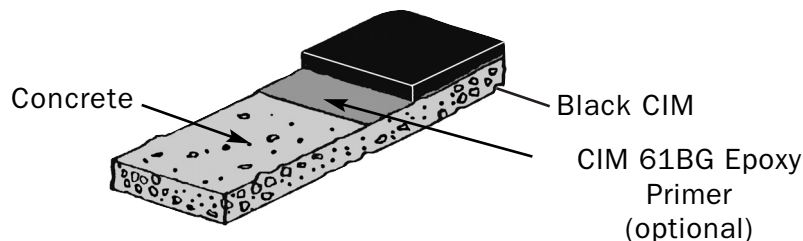

Notes:

¹If surfaces are not completely clean, black CIM will achieve poor adhesion to the concrete and may experience blistering and possible failure.

²CIM 61BG Epoxy Primer shall be applied at a minimum rate of 5 wet mils. Additional applications of CIM 61BG Epoxy Primer may be required to achieve a pinhole free primer coat. The recoat window for CIM 61BG Epoxy Primer shall be no longer than 48 hours. Please see CIM 61BG Epoxy Primer Coating Profile for additional information.

NOTES:

CONCRETE SHOULD NOT BE COATED WHILE IN DIRECT SUNLIGHT!

Concrete should be coated only while in a temperature declining mode. CIM, because it is black, is a solar absorber and can increase the surface temperature of the concrete by as much as 90°F. This, in turn, heats up the air trapped within the concrete's pores. The air expands and tries to push its way out of the concrete, creating hundreds of bubbles, otherwise known as outgassing. Therefore, if concrete is coated in direct sunlight (e.g. a temperature rising mode), outgassing will generally occur.

4.1 New Concrete

New concrete must have a minimum compressive strength of 3,000 psi, be dry, and be free of release agents or curing compounds prior to the application of black CIM coatings. Black CIM may be applied directly to concrete laitance but good adhesion is unlikely. Due to the poor tensile properties of concrete laitance, it is recommended to remove the concrete laitance and expose the tops of the underlying aggregate. This condition is typically represented by an ICRI Concrete Surface Profile of 4 to 6 to expose aggregate. In order to properly prepare the concrete, and remove any release agents or curing compounds, any one of the following can be performed:

1. Abrasive blasting (ASTM D 4259-88)
2. Water blasting (ASTM D 4259-88) (generally at 5,000 psi minimum), allow concrete to dry
3. Shot blast (ASTM D 4259-88), horizontal surfaces

4.2 Old Concrete

Old concrete must be clean and dry, and free of oil, grease and loose powder or debris. It is highly recommended to remove the existing concrete laitance on the surface and expose the tops of the underlying aggregate. This condition is typically represented by an ICRI Concrete Surface Profile of 4 to 6. In order to properly prepare the concrete, and remove contaminants, any one of the following can be performed:

1. Abrasive blasting (ASTM D 4259-88)
2. Water blasting (ASTM D 4259-88) (generally at 5,000 psi minimum), allow concrete to dry
3. Shot blast (ASTM D 4259-88), horizontal surfaces


NOTES:

4.3 Bugholes

Bugholes appear as small holes in concrete. These holes often lead to larger holes under the surface of the concrete (see Figure 2). It is important to blast all concrete surfaces where bugholes are present to expose the full view of the hole (no “blind” side surfaces). Bugholes not fully exposed must be filled with appropriate repair materials followed by an abrasive blast to remove any loose powder or debris.

Figure 2

Expose bughole to full view by removing blind side surfaces.

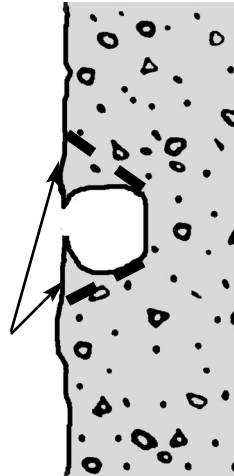

4.4 Testing for Moisture

Although concrete may appear to be dry on the surface, there is often an abundance of moisture below the surface. An abundance of moisture in the concrete during application will result in poor adhesion and eventually blisters in the coating. Consistent with industry standards, C.I.M. Industries recommends performing two or more of the following tests to confirm appropriate moisture levels for properly prepared substrates:

- | | |
|--------------------------------------|-------------------------|
| 1. Plastic Sheet method (ASTM D4263) | Pass/Fail |
| 2. Relative Humidity test | <75% RH @ 70°F |
| 3. Calcium Chloride test | <5 lb/1,000 sq ft/24 hr |
| 4. Radio Frequency test | < 5 % moisture |

(as outlined in “Drying Concrete” by Lew Harriman in the March 1995 issue of *The Construction Specifier Magazine*)

5.0 APPLICATION

5.1 Cracks in Concrete (all applications)

Cracks less than $\frac{1}{16}$ " wide typically do not require special treatment. All cracks $\frac{1}{16}$ " to $\frac{1}{8}$ " wide shall be stripe coated and filled with black CIM prior to the application of the black CIM coating. Vertical and sloped walls require the use of CIM 1000 Trowel Grade to fill cracks.

NOTES:

If cracks are more than $\frac{1}{8}$ " wide or experience movement, refer to manufacturer for patch/fill details. Proper joint design shall be used. CIM Scrim may be used to reinforce cracks and joints. See section 5.4 for further details.

5.2 Penetrations

Penetrations must be coated with CIM 1000 Trowel Grade at all horizontal to vertical transitions. CIM 1000 Trowel Grade should be applied at least 60 wet mils thick, 2" onto and 2" beyond the penetration. Please see section 5.8 for application procedures for multiple coats. If work stoppage is unavoidable see sections 5.9 and 5.10.

Black CIM coatings will adhere to most clean construction materials. When coating substrates other than concrete, please see the C.I.M. Industries' specific substrate Instruction Guide for detailed information of application procedures.

5.3 Sharp Edges

CIM 1000 Trowel Grade may be used on sharp edges to prevent thin spots from occurring. The entire area should be coated with the specified thickness of black CIM coating within 4 hours after troweling sharp edges. Do not allow CIM 1000 Trowel Grade to cure more than four (4) hours at 70°F before coating with additional applications of black CIM. If work stoppage is unavoidable see sections 5.9 and 5.10.

5.4 Using CIM Scrim

CIM Scrim may also be used on sharp edges to prevent thin spots from occurring. After the substrate is properly prepared apply a thin tack, 10–20 mils, of black CIM product. Push scrim evenly into tack coat and allow to cure for 1–4 hours. Apply 60 wet mils of self leveling black CIM directly over scrim. CIM Scrim acts as a coverage gauge to insure thickness.

5.5 Cant Strips

Cant strips should be made with CIM 1000 Trowel Grade wherever horizontal surfaces meet vertical walls. This is crucial in applications such as tanks which experience wall movement when filled, and where concrete shifts due to expansion and contraction. Cant strips are generally $\frac{1}{2}$ " or more wide by $\frac{1}{2}$ " or more tall. Allow the cant to cure for a minimum of 12 hours at 70°F. Contact C.I.M. Industries Inc. for specific design details.

NOTES:**5.6 Horizontal Surfaces**

Black CIM coatings should be applied to concrete at a film thickness of 60 wet mils, depending on application type. This can be achieved in a single coat on horizontal surfaces.

5.7 Vertical and Sloped Surfaces

Black CIM coatings can be applied to a vertical or sloped surface with a roller, brush or spray equipment. Small walls are often coated with rollers or brushes. Large walls should be sprayed using an air assisted airless spray system or plural component spray system. See C.I.M. Industries' Instruction Guide, "Spray Application of CIM" (IG-12) or contact C.I.M. Industries for suggested equipment configuration. When working with black CIM products, vertical or sloped surfaces require a minimum of two (2) applications of approximately 30 mils each to obtain the required thickness. If a coating thickness of more than approximately 60 wet mils is specified on a vertical or sloped surface, additional coats will be required to achieve desired thickness.

5.8 Multiple Coats

Second/multiple coats can be applied as soon as the previous coat can be touched lightly without coming off on your finger. For black CIM products at 70°F, the tack free time is typically one (1) hour but no longer than four (4) hours after the previous coat has been applied. Higher temperatures speed up the curing time, and tack free time, therefore significantly shortening the 1–4 hour recoat window. Colder temperatures have the opposite effect. As soon as the coating becomes tack free, the second coat should be applied. For immersion or traffic service, apply all coats within the recoat window, except at joint lines

If it is necessary to walk on the first coat of black CIM in order to apply multiple coats, such as when coating a parking or pedestrian deck, polyethylene boots may be worn to prevent sticking to the coating.

5.9 Recoating After the Recoat Window

If second/multiple coats cannot be applied within the recoat window (1–4 hours under standard conditions), the previous coat must be abraded. Abrading shall be performed by surface grinder or other mechanical means. The black CIM must be solvent wiped (MEK or xylene) to clean up any loose debris. After the solvent flashes off, a light mist of CIM Bonding Agent must be applied. Allow the Bonding Agent to flash off and recoat within one (1) hour. See CIM Bonding Agent

NOTES:

Coating Profile for additional guidelines. For immersion or traffic service, minimize areas to be recoated outside the recoat window, severely abrade the areas to be recoated and test recoated areas for acceptable adhesion. Acceptable adhesion may only be achieved through aggressive abrading.

5.10 Overlap at Joints

Should rain or other conditions require work stoppage, prepare for joint lines. Joint lines shall be clean and straight. The overlap shall be a minimum of 6" to insure an impervious joint. All areas to be coated where more than a four (4) hour cure has taken place shall be treated per section 5.9, "Recoating After the Recoat Window."

6.0 TOPPINGS

The black CIM system may include toppings of aggregate, decorative coatings, protective coatings, or combinations of the above. See C.I.M. Industries' Instruction Guide, "Topcoats" (IG-7) for more detailed information.

7.0 GENERAL LIMITATIONS

Applying black CIM under any of the following conditions is likely to result in poor or unsatisfactory performance:

- Use of improper mixing equipment. See C.I.M. Industries' Instruction Guide "Mixing CIM Premix and Activator" (IG-8).
- Material temperature at the time of application is below 60°F.
- Use of standard application procedures when substrate temperature is below 50°F. See C.I.M. Industries' Instruction Guide "Applying CIM Coatings in Cold Weather" (IG-11).
- Substrate moisture is present or rain is imminent.
- Substrate temperature is less than 5°F above the dew point.
- Substrate is in a temperature-rising mode or exposed to direct sunlight.
- Other conditions which are obviously unsuitable.