

Notes:

Apply 1" x 1" cant bead along horizontal to vertical transition.

Ensure cant bead has concave profile.

Apply 60 mil thick basecoat of CIM membrane (two 30 mil coats on vertical surfaces).

After 1 hour or so, apply 10-15 mil tack coat over base coat on all surfaces.



Immediately broadcast 20-40 silica sand into tack coat.

Allow to dry 24 hours or minimum of overnight.

Remove all excess and loose silica sand.

Apply acrylic-modified thinset as normal over topcoated CIM membrane.

Install tile as normal.

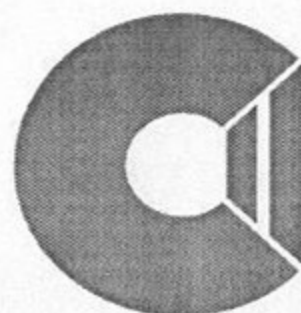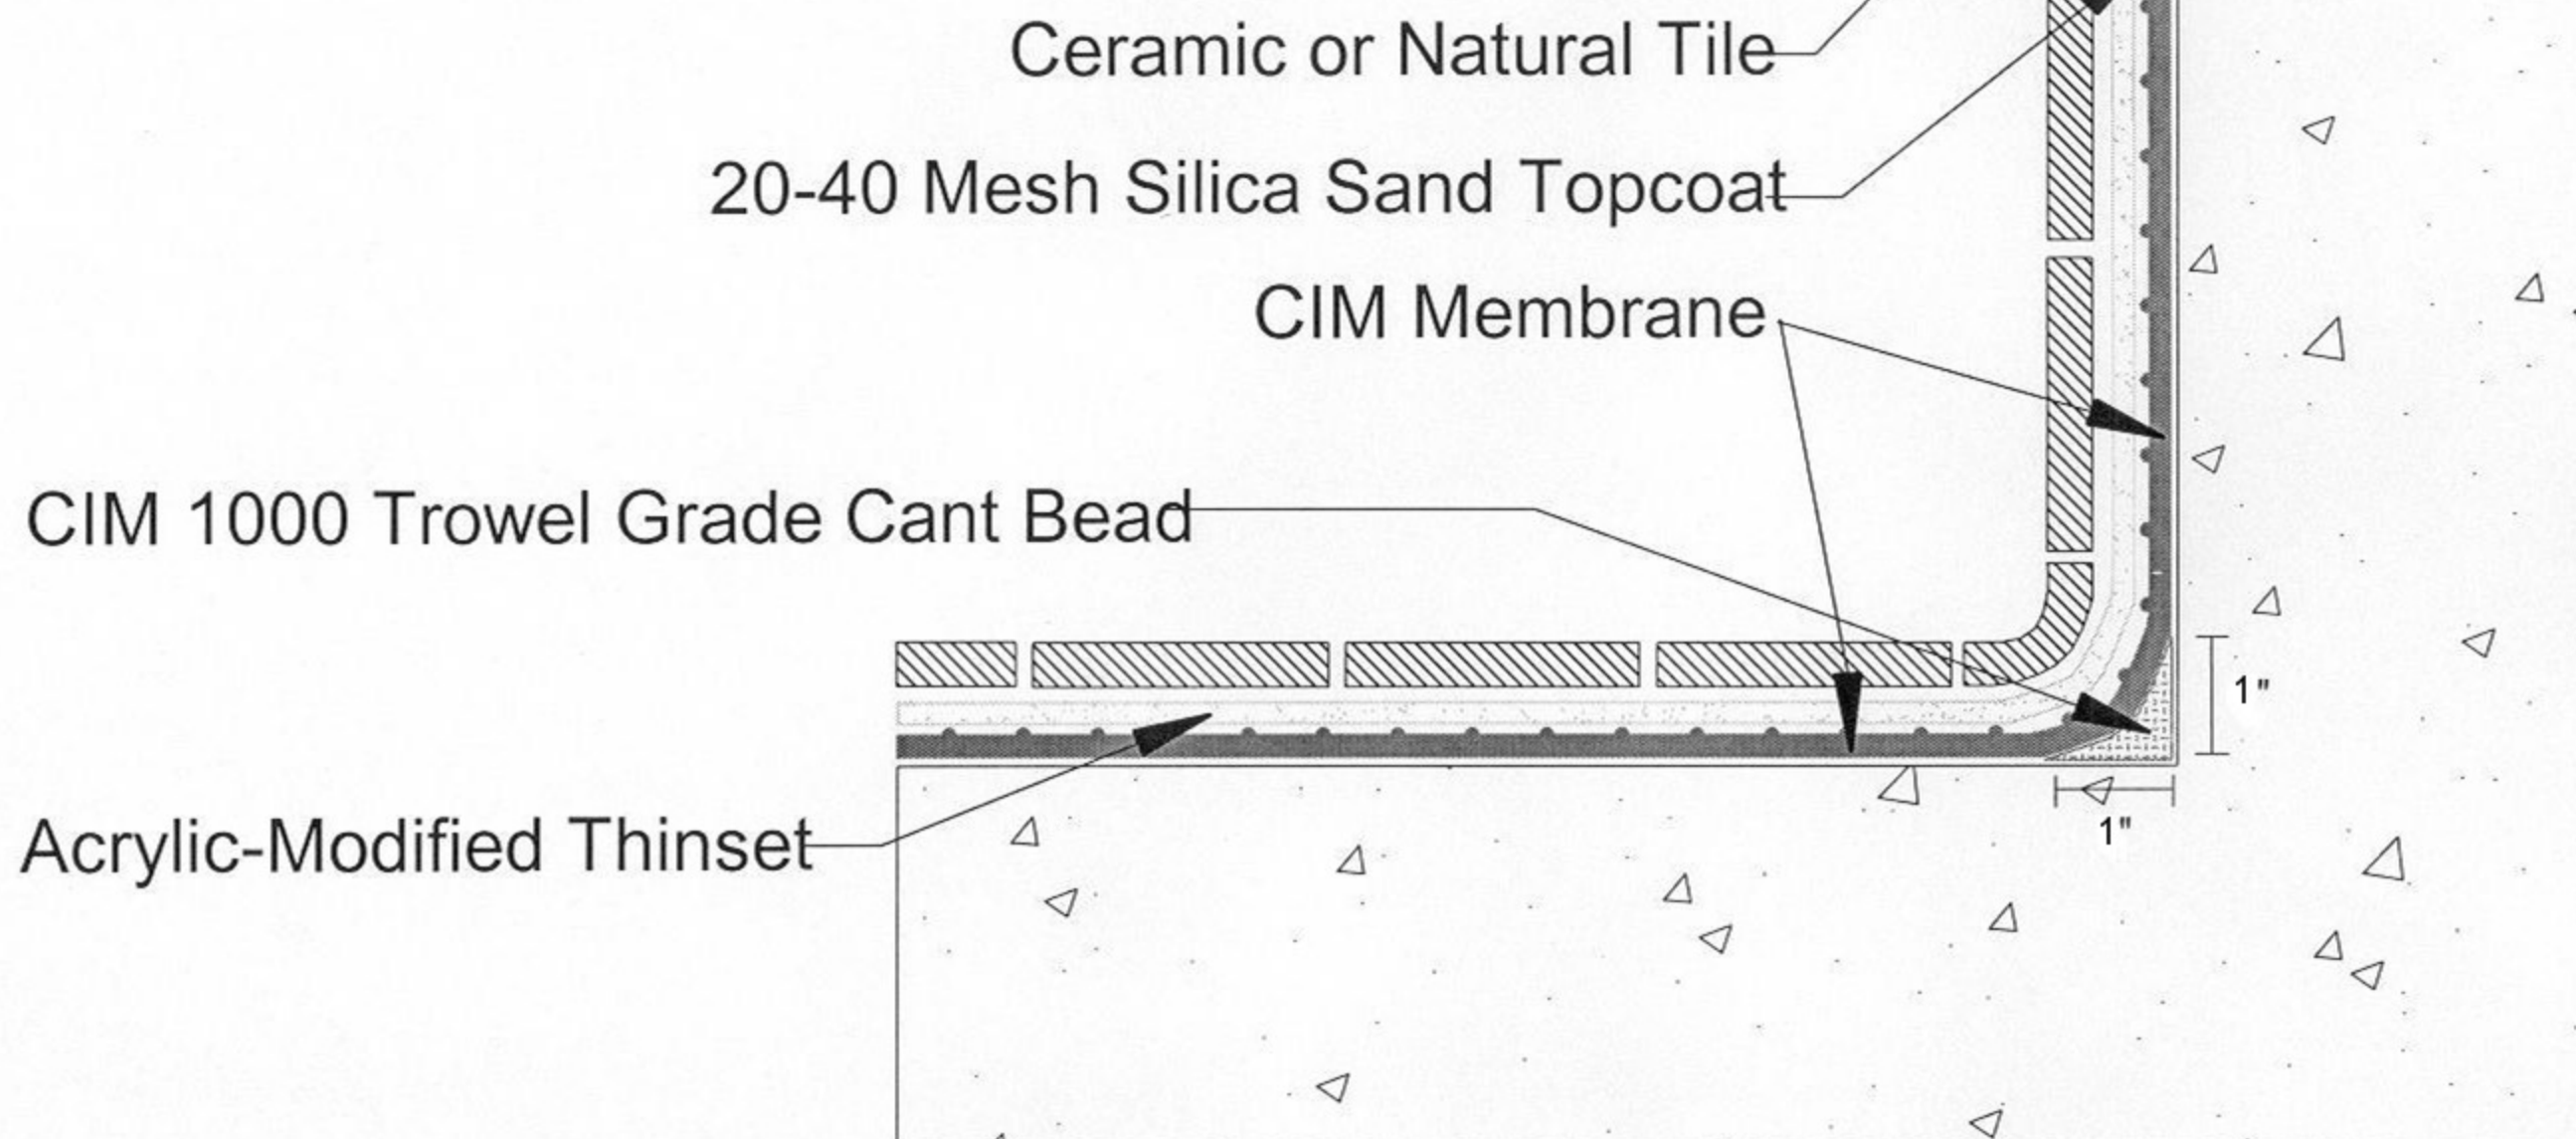

**C.I.M.
Industries
Inc.**

23 Elm Street
Peterborough, NH 03458
Phone: 603/924-9481
Fax: 603/924/9482
Website: www.cimind.com

Title:

Tile w/Thinset over CIM

Scale:

No Scale

Drawing No.:

Tile.dwg

Date:

02/10/01